



Fujifilm Finepix S1000fd Battery Replacement

Replace your battery in the camera to bring it back to life!

Written By: Somya Lalwani



INTRODUCTION

When replacing the battery, make sure to not flip over the camera too hard because you can damage components inside and outside of the camera. You should replace your batteries because your camera simply needs power!

Step 1 — Battery




- Turn the camera upside down.

Step 2



- Flick the switch on the right side of the camera, and bring it downwards, while simultaneously lifting up the cover.
- While the switch is held down, lift up the battery compartment cover.

Step 3

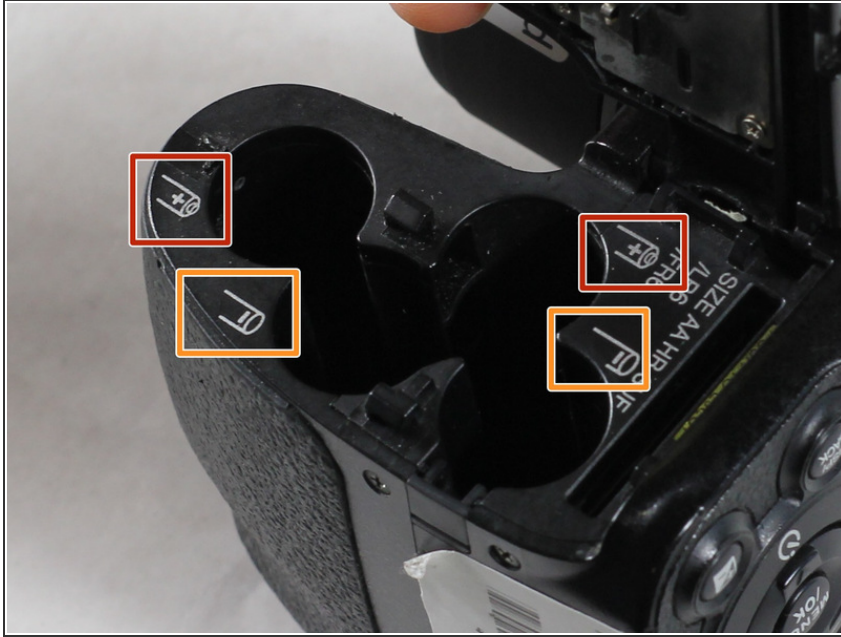

- Observe that the signs on the battery compartment will show you how to insert the 4 AA batteries.
- There should be positive battery signs near the bottom slot and the third slot from the bottom.
- There should be negative battery signs near the top slot and the second slot from the bottom.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 11:10:48 AM.